

HygiSeat


Replace Hygienic Roll - Steps

hygiseat



1

Remove Hygiseat by pressing the buttons on the left and right sides. Then remove the left roller and place in the right 'room'

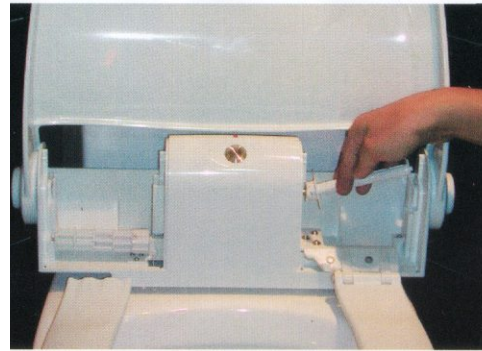

2

Make sure one end of the roller matches the gear, then click it into the slot



3

Click in the fresh film roll into the left 'room', then slide the film wrap underneath the counter wheel and cover the seat.



4

Slide the film wrap to cover the whole seat.



5

Slide the HygiSeat along the slot at the bottom on the top of base placer.



6

Curl the film wrap up by the roller.



7

Press the stainless steel button to activate the toilet seat and wrap one cycle. Then place cover back on seat until you hear a click.

